COMPONENTS CORNER BRACKET В SPIGOT FRONT GROUND ANCHOR **×2** REAR GROUND ANCHOR Ε GROUND PEG ^x26 F **×2** PLASTIC STANCHION ELBOW ×6 LARGE QUICK RELEASE BUTTON **×4** SMALL QUICK RELEASE BUTTON


×24



ARROW HEAD NET FIXING

with attached LOCKING PIN


NET GOAL NET 12' x 6'

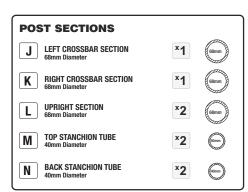


68mm --- 12 x 6 --- UPVC ITSA GOAL ANCHORED 2 PC --- Fl.cdr

12' X 6' UPVC GOAL POST (ANCHORED)


(12' x 6') - One section crossbar. FITTING INSTRUCTION

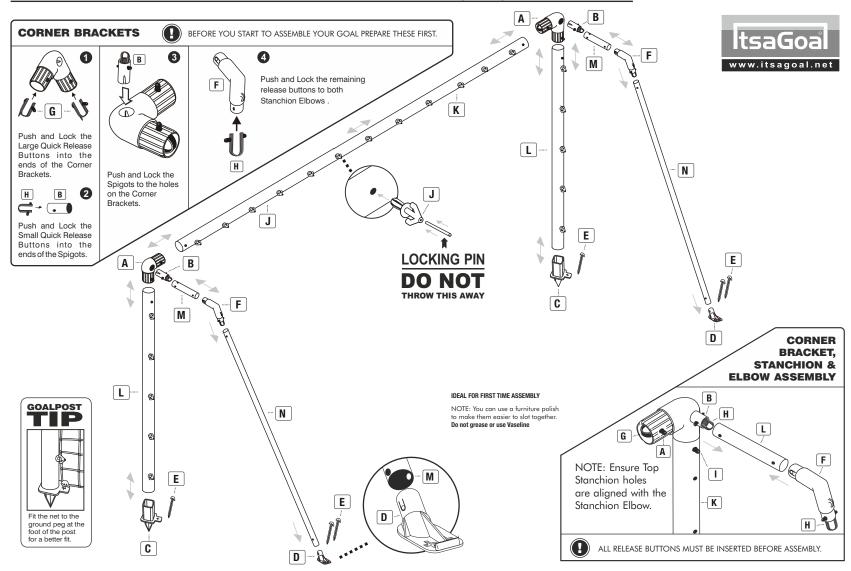

FRONT GROUND ANCHOR POSITIONS

 

Lay the Crossbar Section along the goal line to give you the correct position to insert the Front Ground Anchors and the distance between them (steps 1-2).

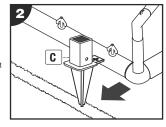

The Front Ground Anchors need to be sunk into the ground. For hard grass surfaces You may need to hammer the Front Ground Anchor. Use a wood block to protect the Anchor (step 3).



When the Ground Anchor is in position you can now slide the Uprights onto the anchors (step 4). To secure the Anchor in the ground use a Ground peg which will keep the Anchor in place (step 5).

