










COMPONENTS




- A** CHROME BARREL LOCK & KEY x3 
- B** GROUND SOCKET x2 
- B1** SOCKET BOLT 45mm THREAD LENGTH x2  8mm
- C** TWIST AND LOCK NET FIXING x50 

POST SECTIONS

- H** CROSSBAR SECTION x1  120mm x 100mm Diameter (Elliptical)
- I** UPRIGHT SECTION x2  120mm x 100mm Diameter (Elliptical)
- CI** CROSSBAR INSERT x1 


OPTIONAL ITEMS

- NET SUPPORT** SUPPLIED IF PURCHASED WITH GOAL.
- DS** REMOVABLE 'D' SUPPORT x2 
 - J** M8 WINGNUT AND HEX SCREW - 50mm LONG x4  8mm

- SOCKET CAP** SUPPLIED IF PURCHASED WITH GOAL.
- CAP** OVAL LOCKING SOCKET CAP x2 
 - KEY** HEAVY DUTY OVAL LOCKING SOCKET CAP x2 
 - KEY** OVAL SOCKET CAP KEY x1 

- NET** SUPPLIED IF PURCHASED WITH GOAL.
- NET** GOAL NET x1 

- ACCESSORIES** SUPPLIED IF PURCHASED WITH GOAL.
- GP** GROUND PEG x40 
 - NR** NET RETAINER - ALLOY x1 
 - NR** NET RETAINER - STEEL x1 

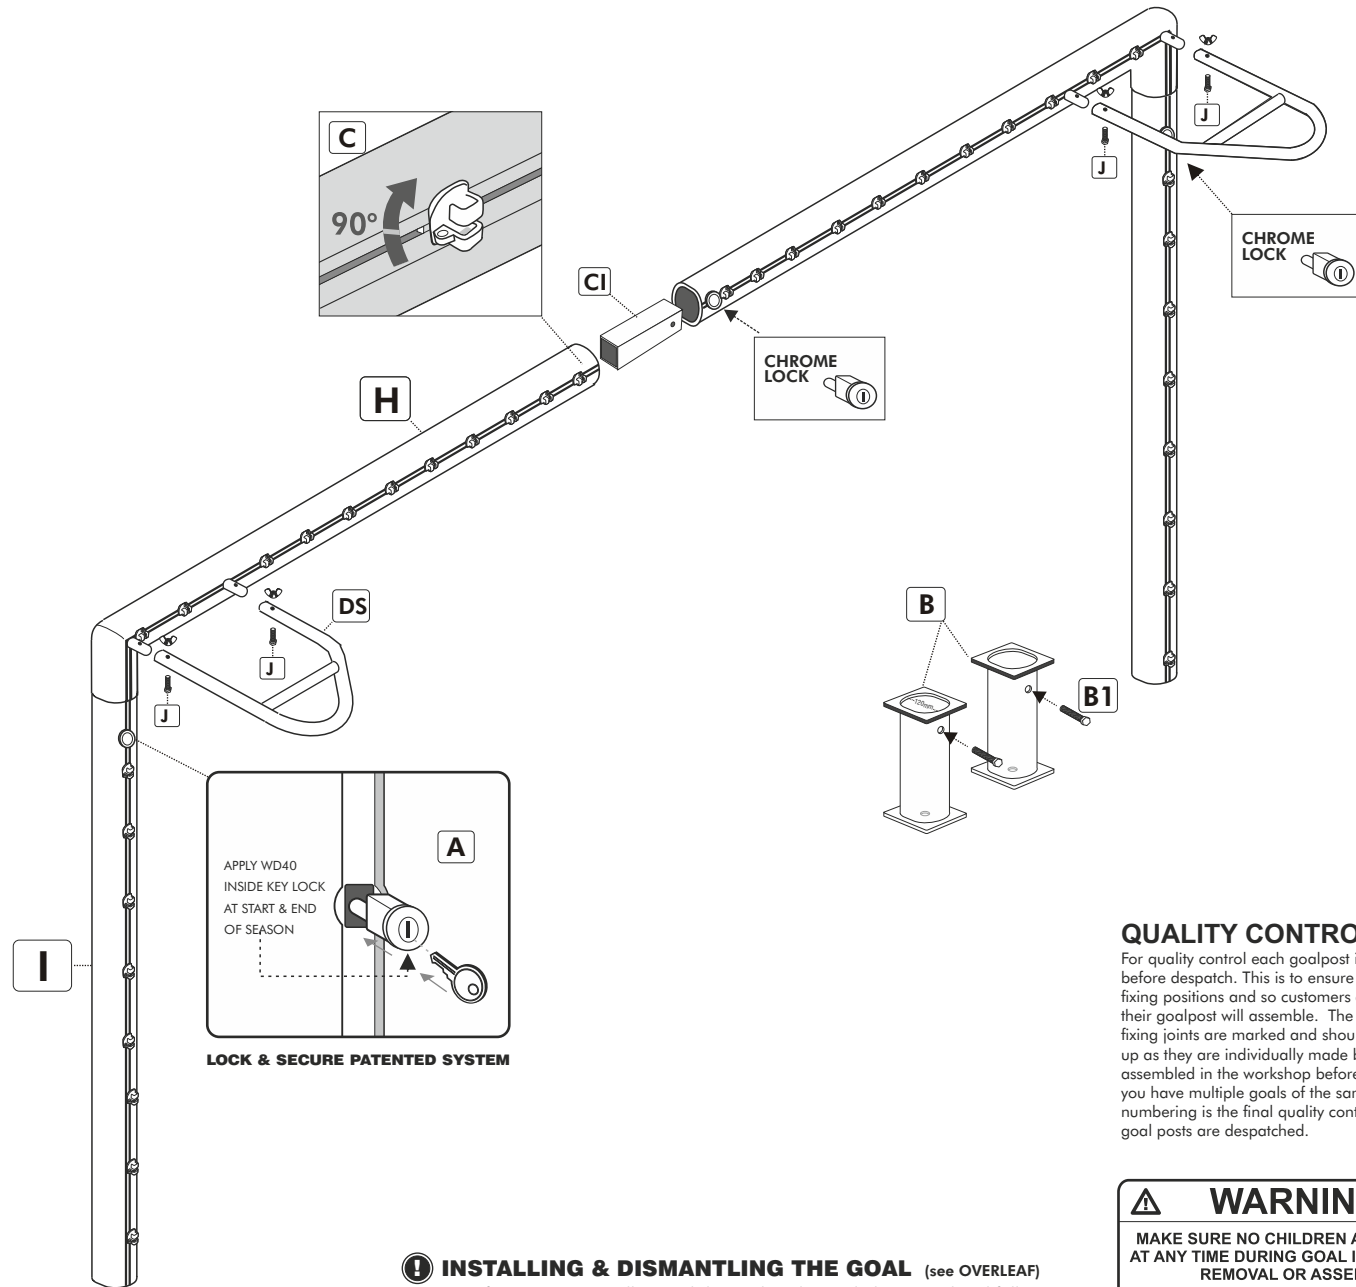

QUALITY CONTROL

For quality control each goalpost is assembled before despatch. This is to ensure alignment of fixing positions and so customers can be assured their goalpost will assemble. The corners and fixing joints are marked and should be matched up as they are individually made by craftsmen and assembled in the workshop before despatch. If you have multiple goals of the same type the numbering is the final quality control check before goal posts are despatched.

⚠ WARNING






MAKE SURE NO CHILDREN ARE PRESENT AT ANY TIME DURING GOAL INSTALLATION, REMOVAL OR ASSEMBLY.

GOALS MUST ALWAYS BE DISMANTLED IF NOT IN USE.




ⓘ INSTALLING & DISMANTLING THE GOAL (see OVERLEAF)

For information on installing and dismantling the goal please read and follow the instructions on the other side of the page.

 

COMPONENTS




- A** CHROME BARREL LOCK & KEY x2 
- B** GROUND SOCKET x2 
- B1** SOCKET BOLT 45mm THREAD LENGTH x2  8mm
- C** TWIST AND LOCK NET FIXING x50 
- BL** BRASS LOCK & KEY x2 

POST SECTIONS



- H** CROSSBAR SECTION x1  120mm x 100mm Diameter (Elliptical)
- I** UPRIGHT SECTION x2  120mm x 100mm Diameter (Elliptical)
- CI** CROSSBAR INSERT x1 


OPTIONAL ITEMS

- NET SUPPORT** SUPPLIED IF PURCHASED WITH GOAL.
- DS** REMOVABLE 'D' SUPPORT x2 
 - J** M8 WINGNUT AND HEX SCREW - 50mm LONG x4  8mm

- SOCKET CAP** SUPPLIED IF PURCHASED WITH GOAL.
- CAP** OVAL LOCKING SOCKET CAP x2 
 - KEY** HEAVY DUTY OVAL LOCKING SOCKET CAP x2 
 - KEY** OVAL SOCKET CAP KEY x1 

- NET** SUPPLIED IF PURCHASED WITH GOAL.
- NET** GOAL NET x1 

- ACCESSORIES** SUPPLIED IF PURCHASED WITH GOAL.
- GP** GROUND PEG x40 
 - NR** NET RETAINER - ALLOY x1 
 - NR** NET RETAINER - STEEL x1 

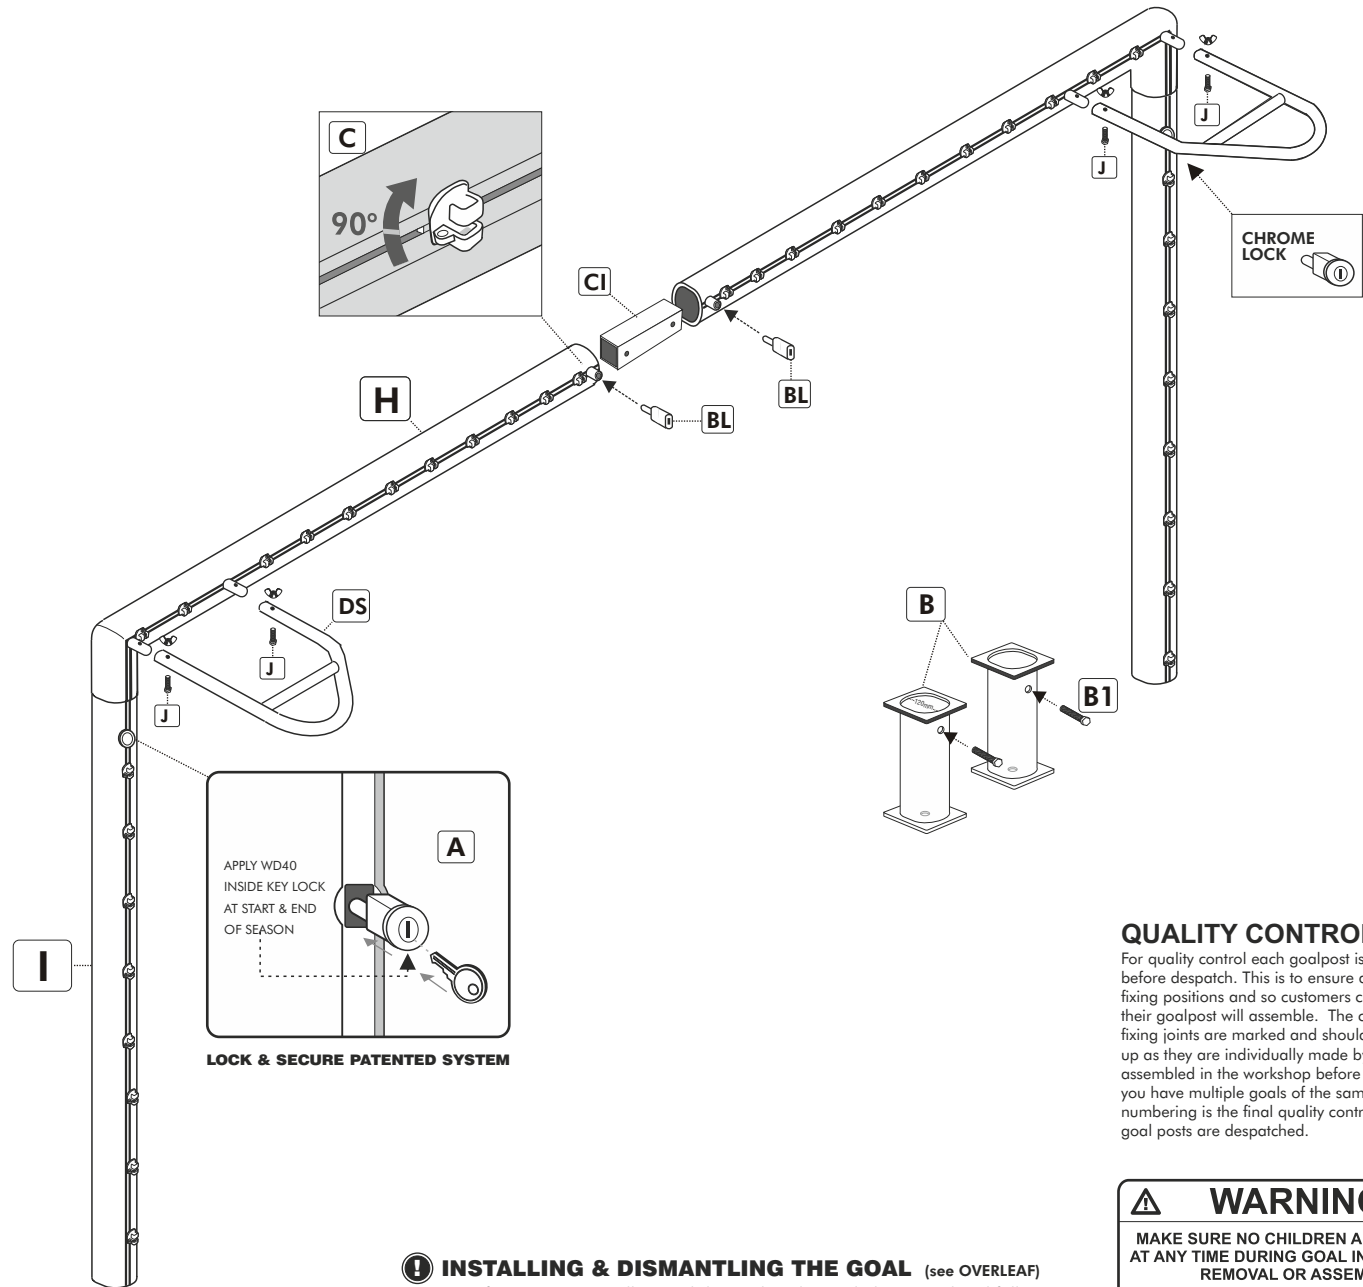

QUALITY CONTROL

For quality control each goalpost is assembled before despatch. This is to ensure alignment of fixing positions and so customers can be assured their goalpost will assemble. The corners and fixing joints are marked and should be matched up as they are individually made by craftsmen and assembled in the workshop before despatch. If you have multiple goals of the same type the numbering is the final quality control check before goal posts are despatched.

⚠ WARNING

MAKE SURE NO CHILDREN ARE PRESENT AT ANY TIME DURING GOAL INSTALLATION, REMOVAL OR ASSEMBLY.


GOALS MUST ALWAYS BE DISMANTLED IF NOT IN USE.

ⓘ INSTALLING & DISMANTLING THE GOAL (see OVERLEAF)

For information on installing and dismantling the goal please read and follow the instructions on the other side of the page.


GROUND SOCKET *Installation diagram*

- 1 Upright
- 2 Sport Surface
- 3 Concrete Block
- 4 Ground Socket
- 5 Drainage Hole
- 6. Socket Bolt
- 7. Pea Gravel

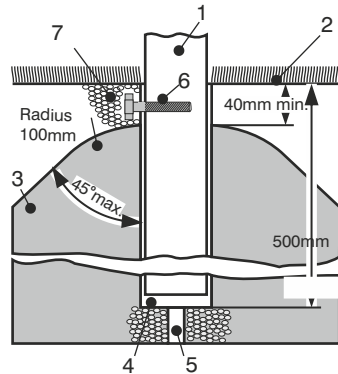


Note 'Socket bolt' must be inserted to prevent ingress of soil into ground socket. Put a dab of grease on it and insert the screw into the hole and just leave it in place. At any time in the future it can be locked'.

IMPORTANT- GROUND SOCKET

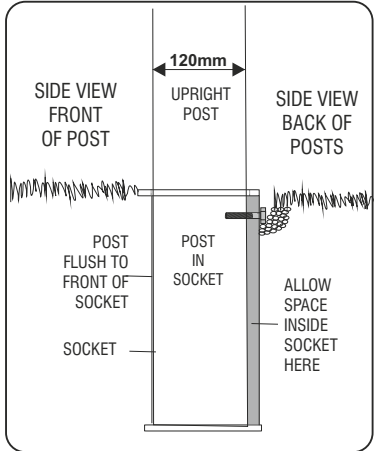

GOAL POST
in ground socket
side view

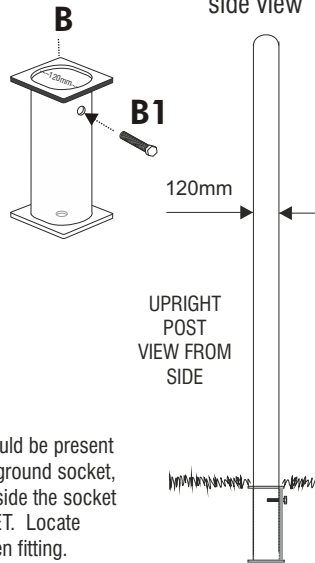

Grey area on diagram denotes the space that should be present once goal is inserted in socket. When fitting any ground socket, tape the top over to prevent concrete dropping inside the socket DURING INSTALLATION OF THE GROUND SOCKET. Locate Upright locking screw to the back of the post when fitting.

GOALPOST PROTECTOR TAPE
AVAILABLE SEPARATELY

Protects paintwork at the base of the upright.

TO PURCHASE VISIT www.soccertackle.com

LOCKABLE GROUND SOCKET CAPS
ARE AVAILABLE SEPARATELY


To cover and protect Ground Socket.

TO PURCHASE VISIT www.soccertackle.com




For spare parts or additional products call the goal-line 0114 2434200 or visit our online supplier www.soccertackle.com

TWIST & LOCK FIXINGS

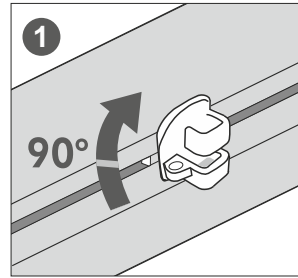

Fit into groove on goalpost section.

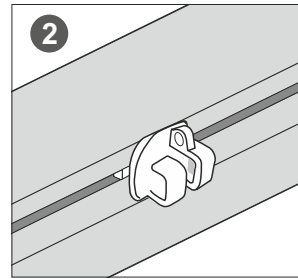

Twist 90 degrees to secure. Position the fixings no more than 340mm apart.

NET FITTING

STEP 1


Attach the net to the twist and lock net fixings on the crossbar and uprights. Fit the corners of the net to the top of each upright first then clip the net onto all other net fixings.

STEP 2

Insert the red safety pegs (optional) to peg your net to the ground, fit corners first. Always insert pegs at an angle. When removing pegs use the back of a peg to take out. Do remove pegs by pulling nets.

STEP 4

The net will have a net head cord. This is to lift the roof of the goal up behind the crossbar. Wrap the cord on the top of the net support on one side and tie off then go to the other side and pull tight and then wrap around the top support and tie off.

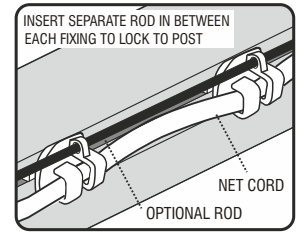

THREAD NET CORD INTO NET FIXINGS

GROUND PEGS

LONGER GROUND PEGS ARE AVAILABLE SEPARATELY.



STANDARD

200mm


SOFTER GROUND

300mm


Longer pegs are to be used on sandy or soft ground earth. A risk assessment of soil conditions suitability should be carried out when anchors are to be used.

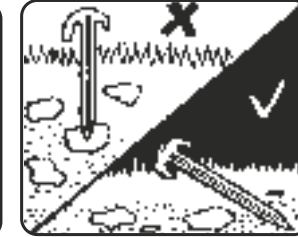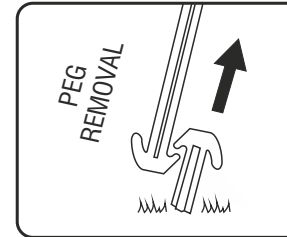

STANDARD NET

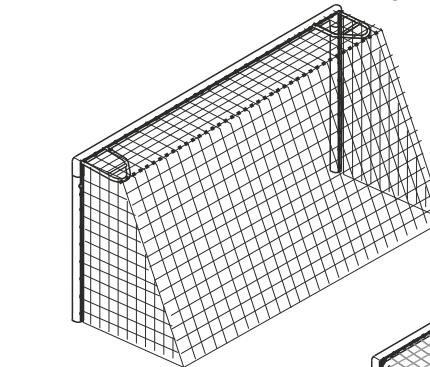

OPTIONAL BOX NETS WITH POLES

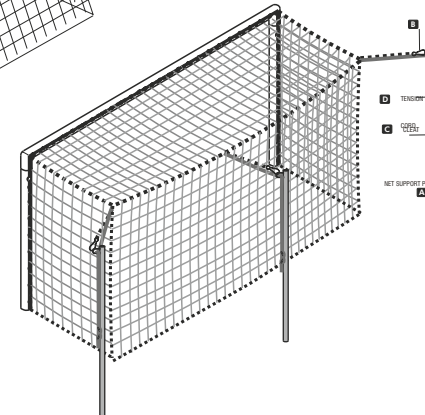

OPTIONAL NET RETAINER

