







COMPONENTS

BL	BRASS BARREL LOCK & KEY	x2	
B	GROUND SOCKET	x2	
B1	SOCKET BOLT 45mm THREAD LENGTH	x2	
C	TWIST AND LOCK NET FIXING	x24	

 
 
POST SECTIONS

H	CROSSBAR SECTION	x1	
I	UPRIGHT SECTION	x2	

OPTIONAL ITEMS

NET SUPPORT

SUPPLIED IF PURCHASED WITH GOAL

DS	REMOVABLE 'D' SUPPORT	x2	
J	M8 WINGNUT AND HEX SCREW -	x4	

NET

SUPPLIED IF PURCHASED WITH GOAL

NET	GOAL NET STANDARD SHAPE	x1	
-----	-------------------------	----	--

ACCESSORIES

SUPPLIED IF PURCHASED WITH GOAL

GP	GROUND PEG	x24	
----	------------	-----	---

 
80mm ALUMINIUM

12' X 6' SOCKETED GOAL -

Note : can be used with Standard shaped nets and optional net supports.

**FITTING
INSTRUCTION**
TEL: 0114 2434200

ItsaGoal
www.itsagoal.net

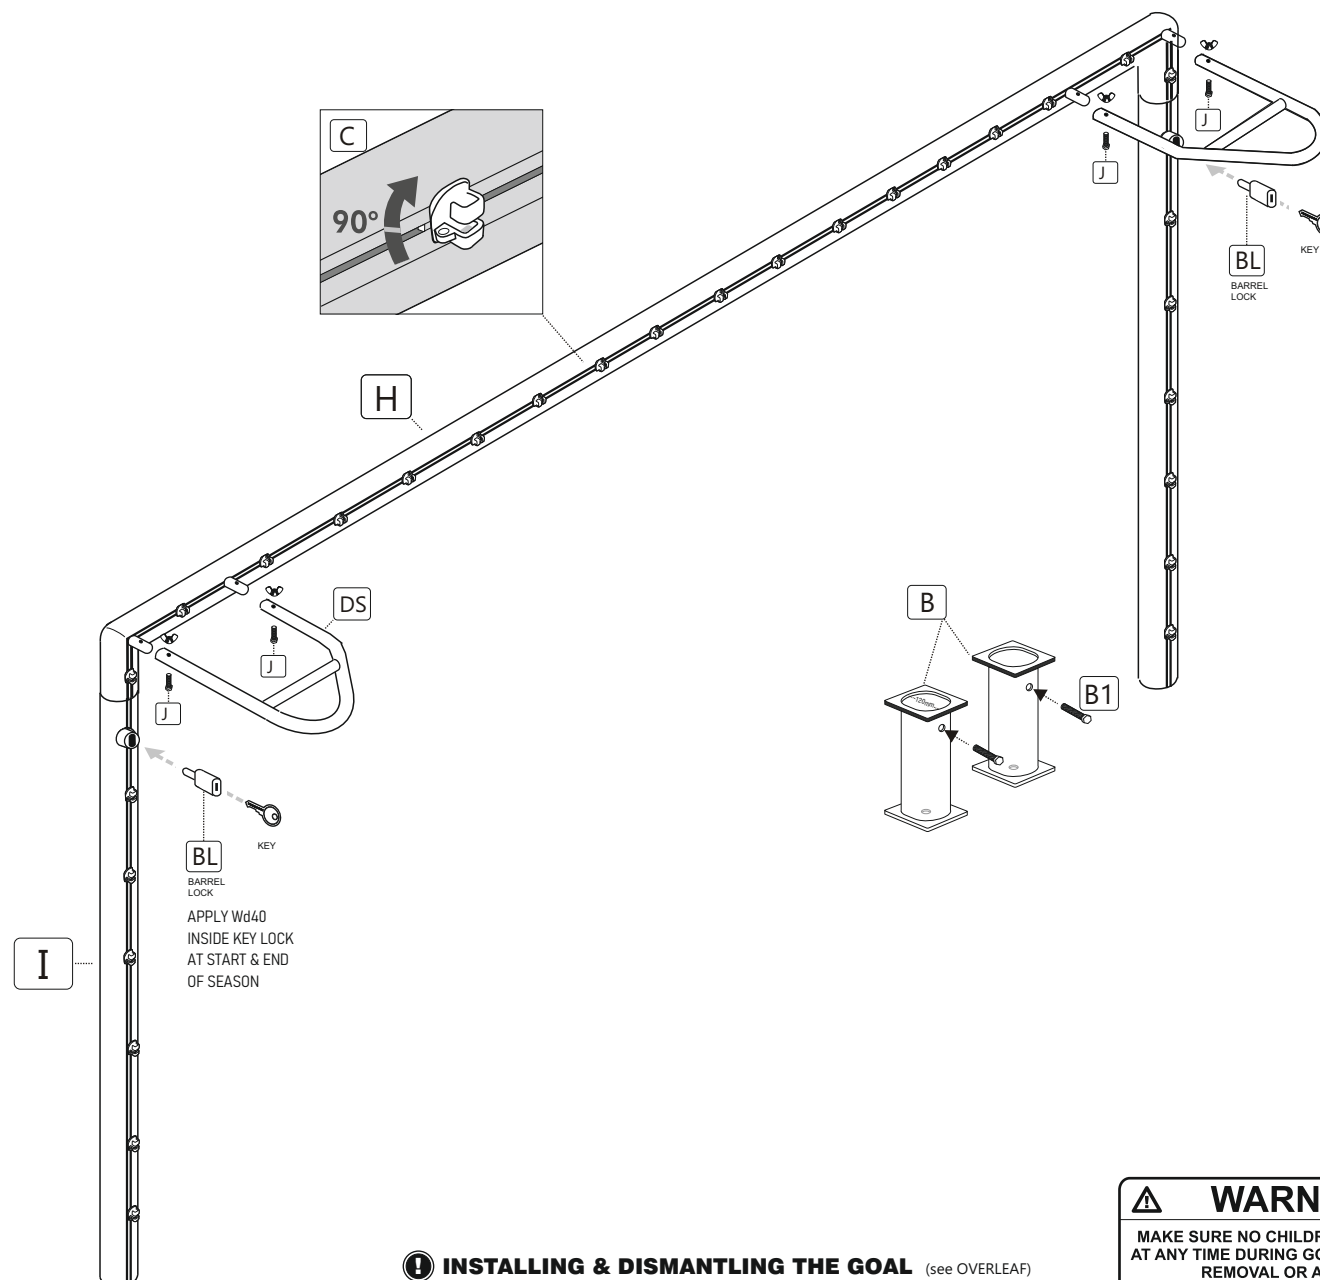


INSTALLING & DISMANTLING THE GOAL (see OVERLEAF)
For information on installing and dismantling the goal please read and

WARNING
MAKE SURE NO CHILDREN ARE PRESENT
AT ANY TIME DURING GOAL INSTALLATION,
REMOVAL OR ASSEMBLY.
GOALS MUST ALWAYS BE DISMANTLED IF NOT IN USE.


GROUND SOCKET *Installation diagram*

- 1 Upright
- 2 Sport Surface
- 3 Concrete Block
- 4 Ground Socket
- 5 Drainage Hole
- 6. Socket Bolt
- 7. Pea Gravel

 Note 'Socket bolt' must be inserted to prevent ingress of soil into ground socket. Put a dab of grease on it and insert the screw into the hole and just leave it in place. At any time in the future it can be locked'.

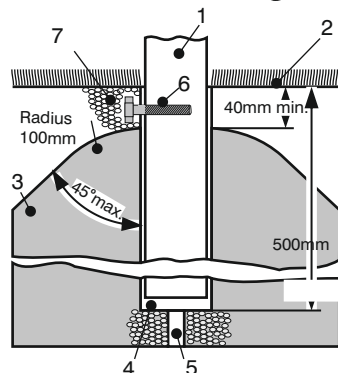


IMPORTANT- GROUND SOCKET

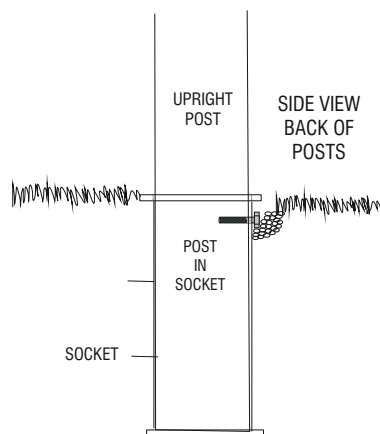 


Locate Upright locking screw to the back of the post when fitting.

 GOAL POST
in ground socket
side view

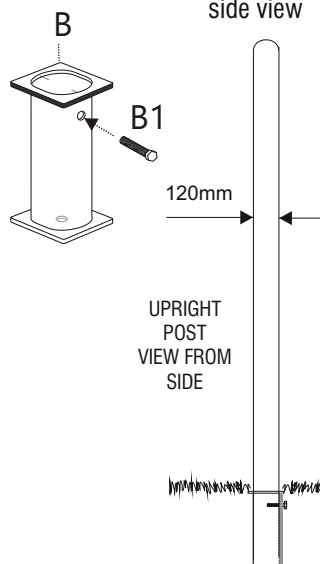


GOALPOST PROTECTOR TAPE

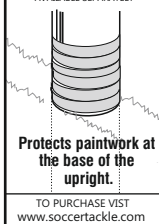 


For spare parts or additional products
call the goal-line
0114 2434200 or visit our online
supplier www.soccertackle.com

 TWIST & LOCK FIXINGS

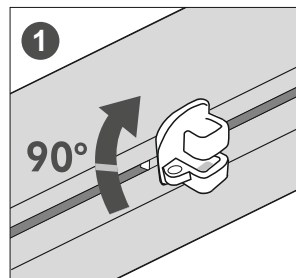

Fit into groove on goalpost section.

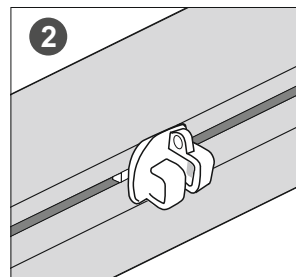 

Twist 90 degrees to secure.
Position the fixings no more
than 340mm apart.

NET FITTING

STEP 1

 
Attach the net to the twist and lock net fixings on the crossbar and uprights. Fit the corners of the net to the top of each upright first then clip the net onto all other net fixings.

STEP 2

Insert the red safety pegs (optional) to peg your net to the ground, fit corners first. Always insert pegs at an angle. When removing pegs use the back of a peg to take out. Do remove pegs by pulling nets.

STEP 4

The net will have a net head cord. This is to lift the roof of the goal up behind the crossbar. Wrap the cord on the top of the net support on one side and tie off then go to the other side and pull tight and then wrap around the top support and tie off.

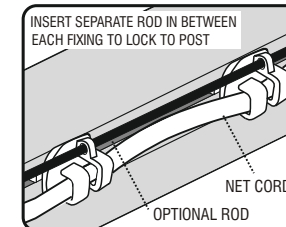

THREAD NET CORD INTO NET FIXINGS

GROUND PEGS

LONGER GROUND PEGS ARE AVAILABLE SEPARATELY.

 
 
STANDARD

200mm


SOFTER GROUND

300mm


Longer pegs are to be used on sandy or Soft ground earth. A risk assessment of soil conditions suitability should be carried out when anchors are to be used.

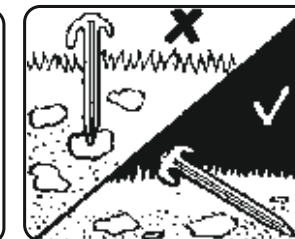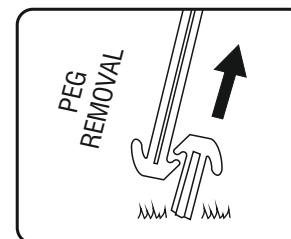

STANDARD NET

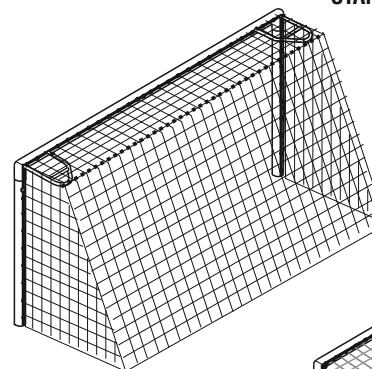 

OPTIONAL BOX NETS WITH POLES

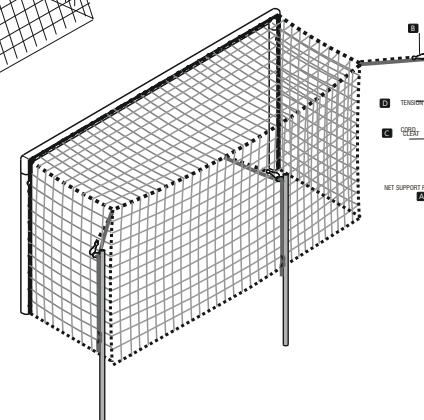 

OPTIONAL NET RETAINER

