








 
COMPONENTS

BL	BRASS BARREL LOCK & KEY	x2	
B	GROUND SOCKET	x2	
B1	SOCKET BOLT 45mm THREAD LENGTH	x2	 8mm
C	TWIST AND LOCK NET FIXING	x32	


POST SECTIONS

H	CROSSBAR SECTION	x1	
I	UPRIGHT SECTION	x2	

OPTIONAL ITEMS

NET SUPPORT SUPPLIED IF PURCHASED WITH GOAL.			
DS	REMOVABLE 'D' SUPPORT	x2	
J	M8 WINGNUT AND HEX SCREW - 50mm LONG	x4	 8mm

NET SUPPLIED IF PURCHASED WITH GOAL.			
NET	GOAL NET - STANDARD SHAPE	x1	


ACCESSORIES SUPPLIED IF PURCHASED WITH GOAL.			
GP	GROUND PEG	x35	

80MM ALUMINIUM

16' X 7' SOCKETED GOAL - NET SUPPORTS

FITTING INSTRUCTION
TEL: 0114 24 34 200

 ItsaGoal
www.itsagoal.net

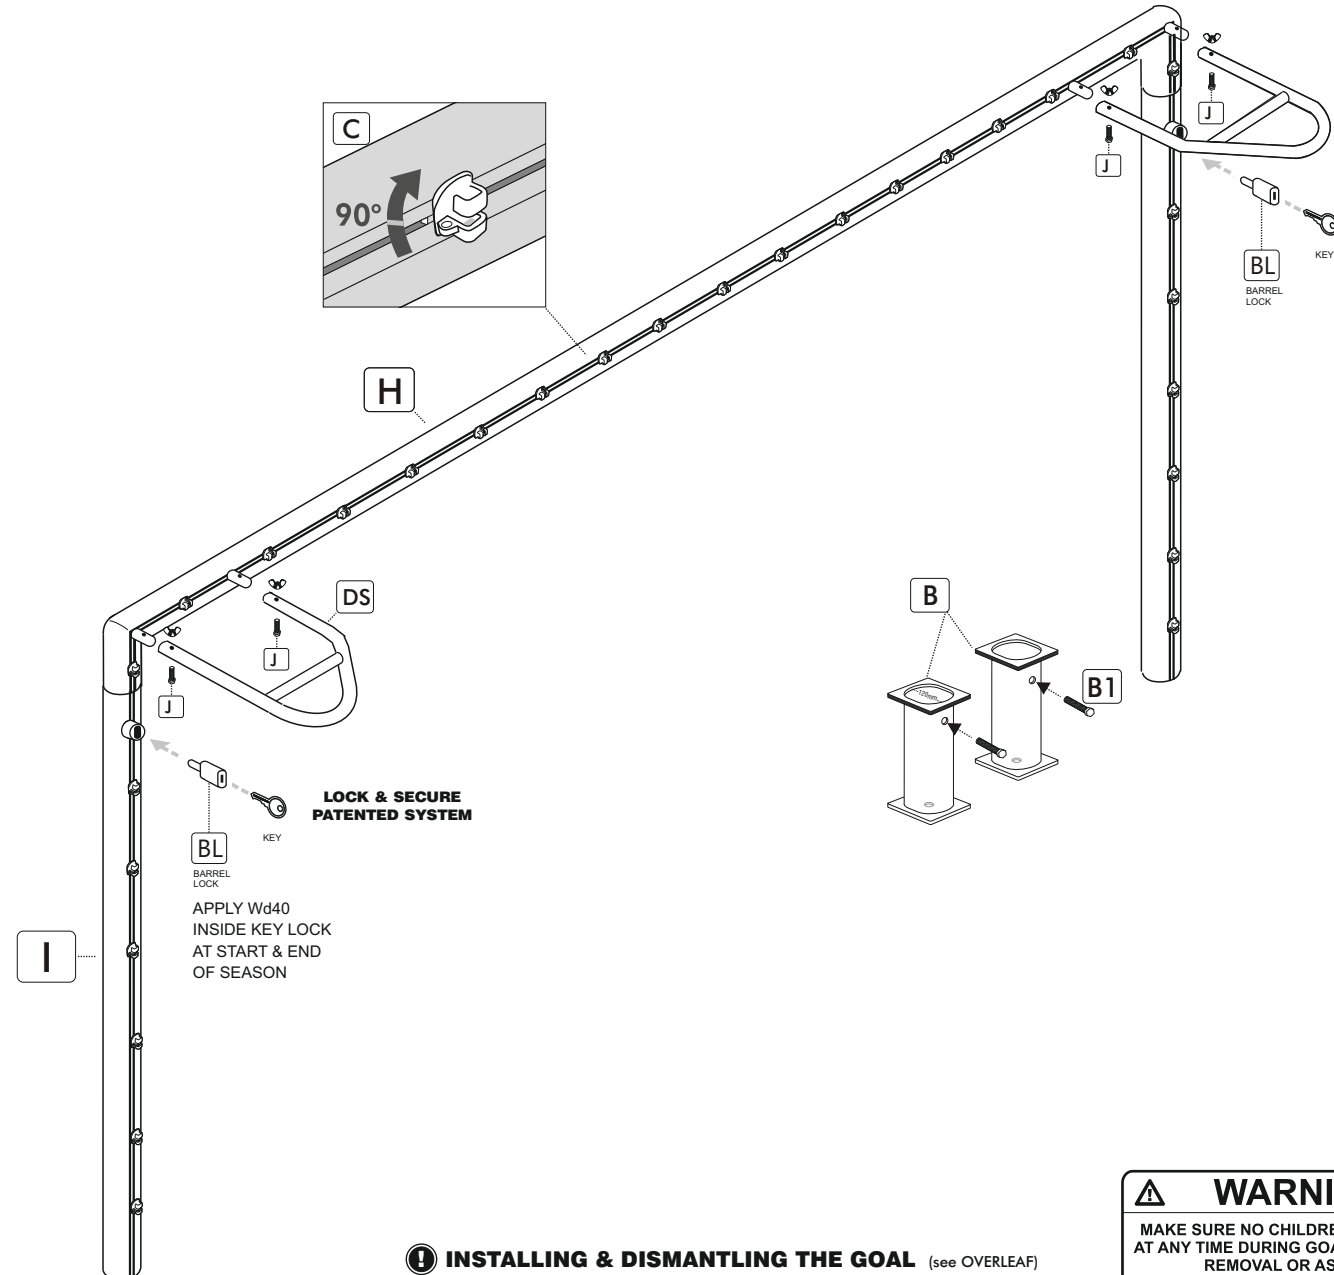

ⓘ INSTALLING & DISMANTLING THE GOAL (see OVERLEAF)

For information on installing and dismantling the goal please read and follow the instructions on the other side of the page.

 
⚠ WARNING

MAKE SURE NO CHILDREN ARE PRESENT AT ANY TIME DURING GOAL INSTALLATION, REMOVAL OR ASSEMBLY.

GOALS MUST ALWAYS BE DISMANTLED IF NOT IN USE.


GROUND SOCKET *Installation diagram*

- 1 Upright
- 2 Sport Surface
- 3 Concrete Block
- 4 Ground Socket
- 5 Drainage Hole
- 6. Socket Bolt
- 7. Pea Gravel

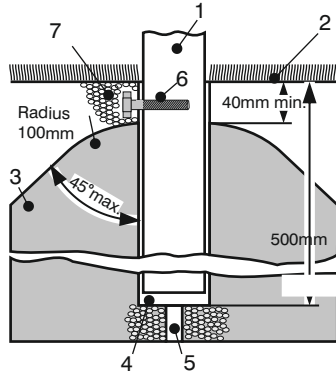


Note 'Socket bolt' must be inserted to prevent ingress of soil into ground socket. Put a dab of grease on it and insert the screw into the hole and just leave it in place. At any time in the future it can be locked'.

 IMPORTANT- GROUND SOCKET

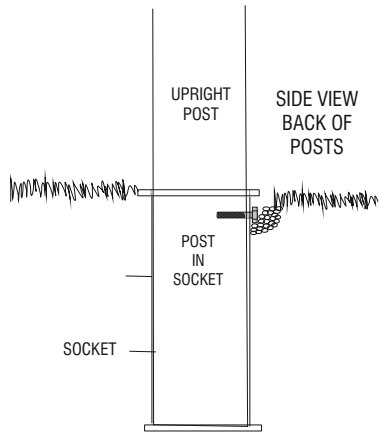

GOAL POST
in ground socket
side view

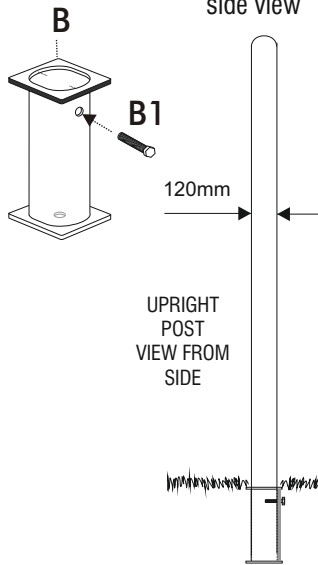 

UPRIGHT
POST
VIEW FROM
SIDE

Locate Upright locking screw to the back of the post when fitting.

GOALPOST PROTECTOR TAPE
AVAILABLE SEPARATELY

 
Protects paintwork at the base of the upright.

TO PURCHASE VISIT www.soccertackle.com




For spare parts or additional products call the goal-line 0114 2434200 or visit our online supplier www.soccertackle.com

TWIST & LOCK FIXINGS

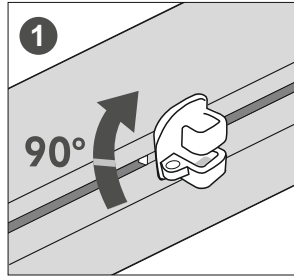

Fit into groove on goalpost section.

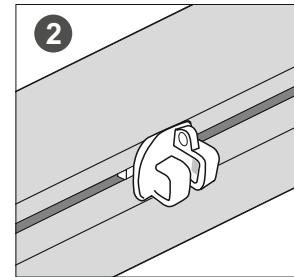 


Twist 90 degrees to secure. Position the fixings no more than 340mm apart.

NET FITTING



STEP 1
Attach the net to the twist and lock net fixings on the crossbar and uprights. Fit the corners of the net to the top of each upright first then clip the net onto all other net fixings.

STEP 2
Insert the red safety pegs (optional) to peg your net to the ground, fit corners first. Always insert pegs at an angle. When removing pegs use the back of a peg to take out. Do not remove pegs by pulling nets.

 STEP 4
The net will have a net head cord. This is to lift the roof of the goal up behind the crossbar. Wrap the cord on the top of the net support on one side and tie off then go to the other side and pull tight and then wrap around the top support and tie off.

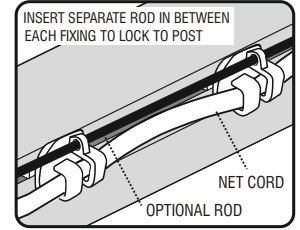

THREAD NET CORD INTO NET FIXINGS

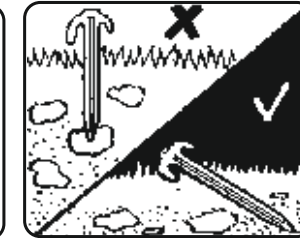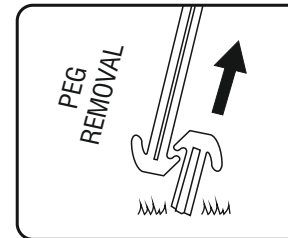  

GROUND PEGS

LONGER GROUND PEGS ARE AVAILABLE SEPARATELY.

STANDARD

 
200mm

SOFTER GROUND



300mm

Longer pegs are to be used on sandy or soft ground earth. **A risk assessment of soil conditions suitability should be carried out when anchors are to be used.**

STANDARD NET

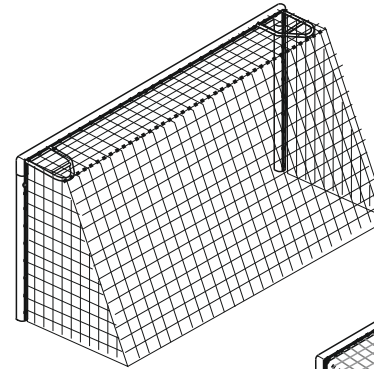

OPTIONAL BOX NETS WITH POLES

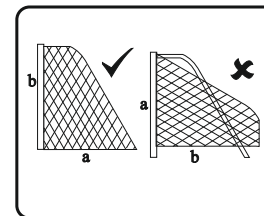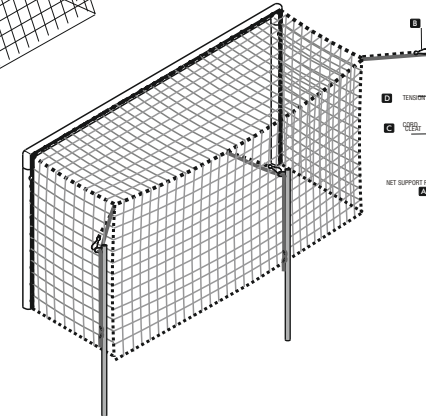  

OPTIONAL NET RETAINER

