

COMPONENTS

AT	T BRACKET with nylon bush pre inserted for top post connection	x2	
A	CORNER BRACKET	x2	
X	CORNER BRACKET UPRIGHT 4 HOLES	x2	
C	SPIGOT	x4	
D	BLANKING CAP	x2	
E	MULTI-SURFACE ANCHOR	x4	
F	GROUND PEG	x8	
G	STANCHION ELBOW	x2	
H	LOWER BACK STANCHION CONNECTOR	x2	
I	LARGE QUICK RELEASE BUTTON	x12	
J	SMALL QUICK RELEASE BUTTON	x8	
K	M10 SOCKET DOME SCREW AND HEX DOME NUT - 80mm LONG	x2	
L	NET TIE	x28	
M	STRAIGHT CONNECTOR	x1	
N	ARROW HEAD NET FIXING with attached LOCKING PIN	x30	
NET	GOAL NET 16' x 7'	x1	
AK	HEX KEY FOR COMPONENT K	x1	
NH	GROUND FRAME NET FIXING HOOK	x28	

POST SECTIONS

O	TOP POST SECTION 2422mm LONG - 68mm Diameter	x2	
PI	CROSSBAR SECTION with insert Aluminium	x1	
P	CROSSBAR SECTION Aluminium	x1	
Q	BACKBAR SECTION 2422mm LONG - 68mm Diameter	x2	
R	SIDEBAR SECTION 1726mm LONG - 68mm Diameter	x2	
S	UPRIGHT SECTION 2031mm LONG - 68mm Diameter	x2	
T	TOP STANCHION TUBE 630mm LONG - 40mm Diameter	x2	
U	BACK STANCHION TUBE 2232mm LONG - 40mm Diameter	x2	

 
16' X 7' GAELIC GOAL (Multi-Surface) - Two Section Aluminium Crossbar.

CARE & MAINTENANCE

see separate sheet supplied or visit www.itsagoal.net for additional copies. Our goalpost if used correctly will last many years. We do also offer a full spare part service and if your goals need refurbishment this can be arranged

MINI-SOCCER CORNER KIT


AVAILABLE SEPARATELY



To make a complete mini-soccer goal.

TO PURCHASE VISIT www.soccertackle.com

 
FITTING INSTRUCTION

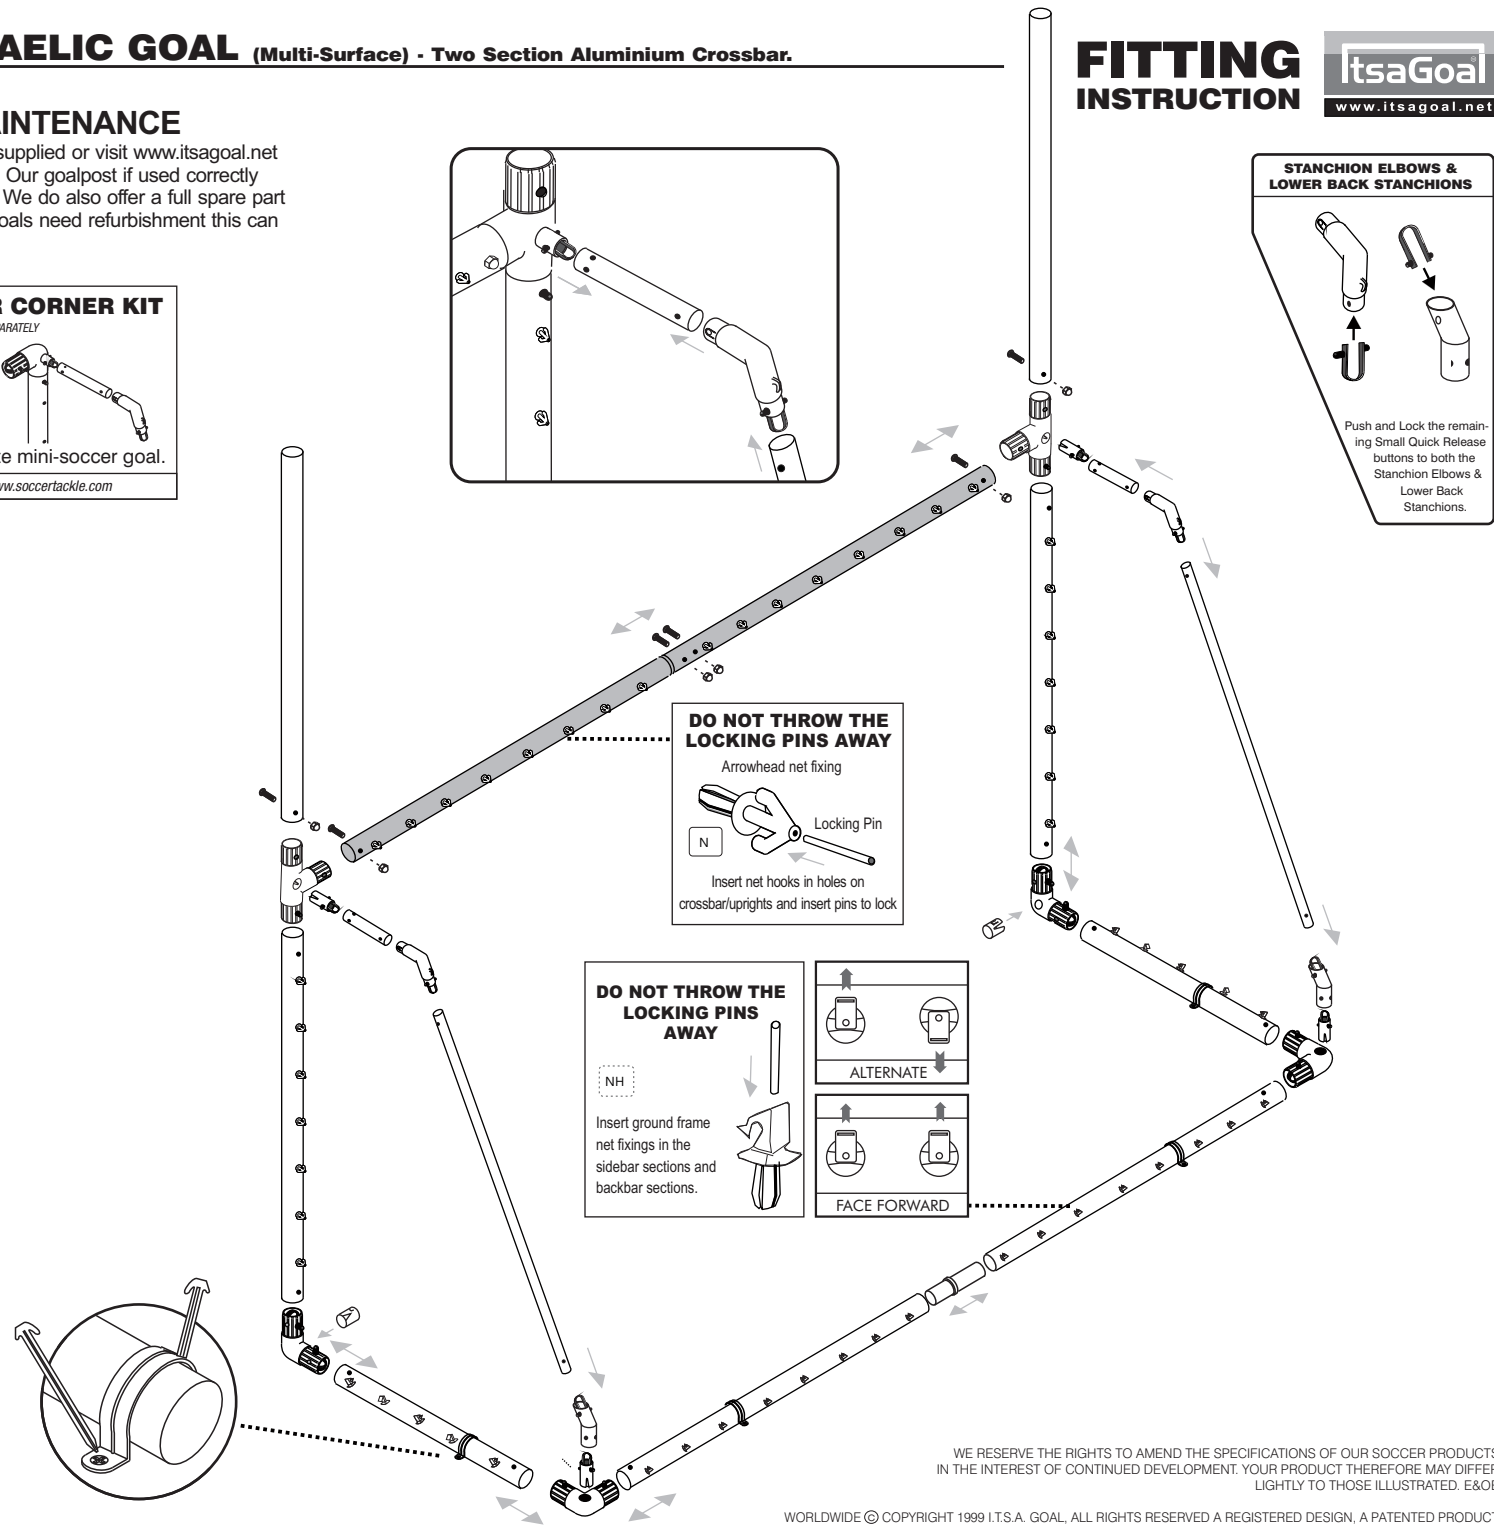

TEL: 0114 24 34 200
SPARE PARTS


STEP 1

 Lay out all Posts & components

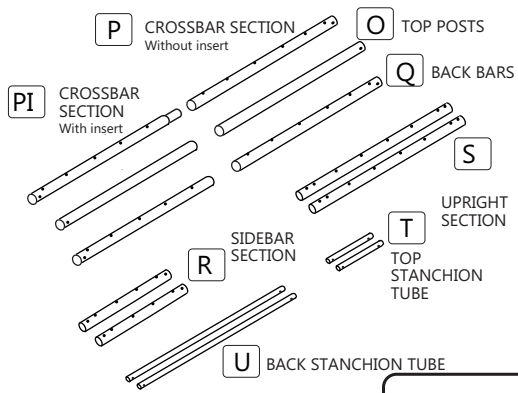


STEP 2

 Insert small quick release black button into Spigots and insert one Large Quick Release Button into each T Bracket, this is to lock the upright posts.

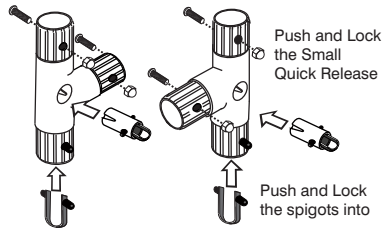




STEP 3

 Insert Blanking Cap and insert Large Quick Release Buttons into Corner Bracket

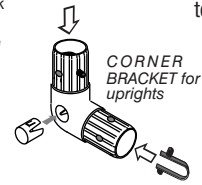

STEP 4

   Insert small quick release black button into the lower back stanchion connector. Insert a black Button into the Spigot. Insert Spigot and insert Large black buttons into two Corner Brackets, connect parts together

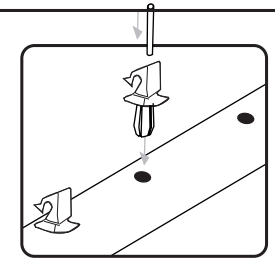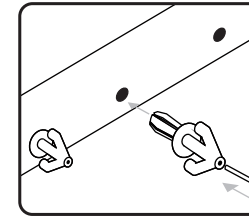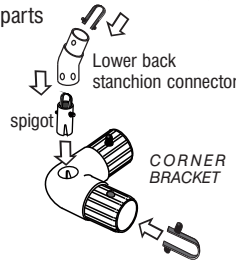

STEP 5

Insert Arrow Head Net Fixings into Upright Posts and into crossbar.

STEP 6

Insert Ground Frame net Fixings into Back bar and Side bar. see details about removing burrs overleaf.

STEP 7

Insert Corner Brackets X into the upright posts S (uprights have logos on the side)

STEP 8

Insert T Brackets into each end of the crossbar, tighten nuts bolts

STEP 9

Insert Corner Brackets A into each end of the Backbars Q

STEP 10

Attach Side bars R to the ground back frame, connect both back bars together with the straight connector M

STEP 11

 
 
Attach Upright S to the Side bars R

STEP 12

Fit the Aluminium crossbar together PI(crossbar with insert) with K nuts and bolts to Crossbar P. Then fit crossbar onto uprights.

STEP 13

Join top tubes T to elbows G and back tubes U and connect to the goalpost.

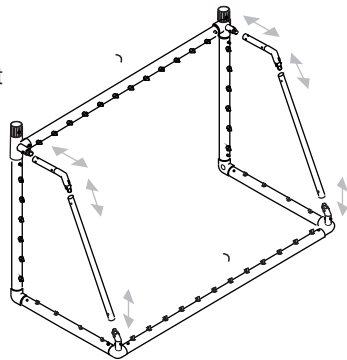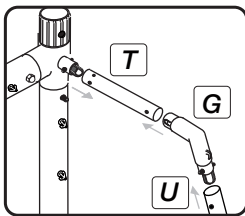


STEP 14

Attach Top Tubes using nuts and bolts. Fit Ground Anchors over the ground base see details of use overleaf.

STEP 15

Attach The Net to the Net Fixings. Start with each corner

 
TIE A CORD BETWEEN THE TOP SUPPORT TUBES TO SUPPORT THE ROOF OF THE NET (THIS CAN BE LEFT TIED IN POSITION WHEN DISMANTLED)

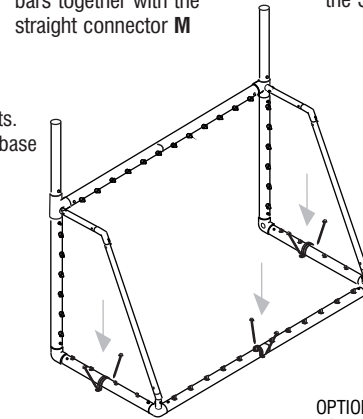

FASTER MATCH DAY






ASSEMBLY & DISASSEMBLY

 The goal net can be left attached to the pre-assembled goal post side frames. After games detach crossbar and back bar for storage. We advise fitting the optional net ties to the side frames and stanchions.

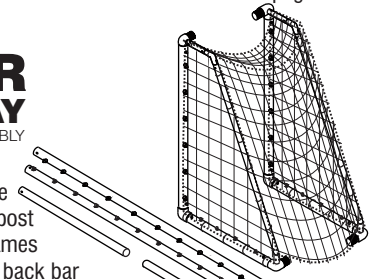


OPTIONAL - Net ties are ideal to fit nets tightly to the side ground frames and stanchions. This is ideally when nets are left attached to the fully assembled side frames.

     ANCHORING YOUR GOAL ON GRASS - POSITION YOUR GOAL ON A LEVEL PLAYING SURFACE. PLACE THE MULTI-SURFACE ANCHOR OVER EACH SIDE OF THE GROUND FRAME (POSITIONS SHOWN) HAMMER THE PEGS DOWN UNDER THE FRAME INTO THE GRASS. ADDITIONAL ANCHORS OR LARGER PEGS CAN BE PURCHASED FOR USE ON SOFT GROUND OR SAND. THESE ANCHORS CAN BE USED FOR HARD SURFACES, SUCH AS TARMAC BY USING BOLTS THROUGH THE MULTI SURFACE ANCHORS INTO CONCRETE PADS. COUNTER BALANCE WEIGHTS CAN ALSO BE USED (SUPPLIED SEPARATELY). CHAINS ARE AVAILABLE SEPARATELY THAT CAN BE USED TO SECURE GOALS TO SEPARATE ANCHOR POINTS.

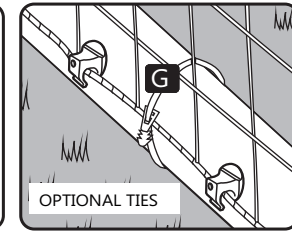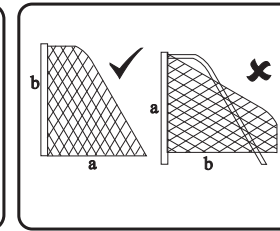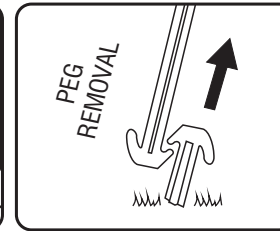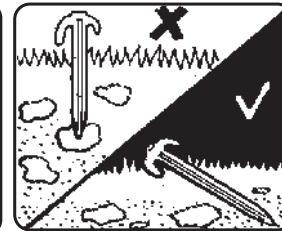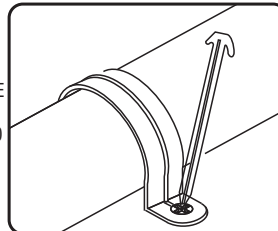

DO NOT THROW THE PINS AWAY

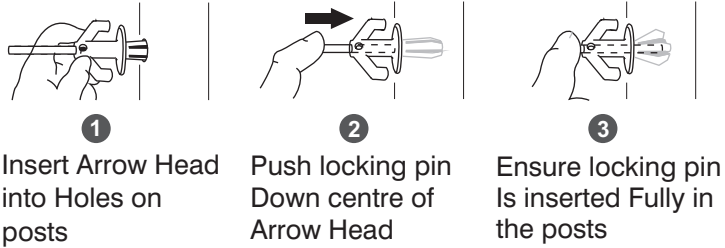 


1
Insert Arrow Head into Holes on posts

2
Push locking pin Down centre of Arrow Head

3
Ensure locking pin is inserted Fully in the posts

GROUND FRAME NET FIXING

 DO NOT THROW THE LOCKING PINS AWAY

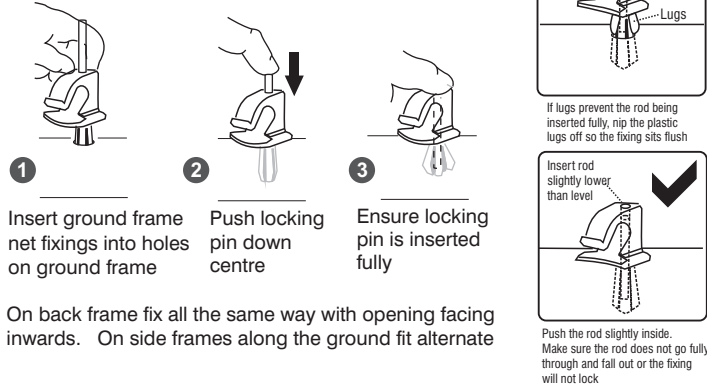

1
Insert ground frame net fixings into holes on ground frame

2
Push locking pin down centre

3
Ensure locking pin is inserted fully

On back frame fix all the same way with opening facing inwards. On side frames along the ground fit alternate

Push the rod slightly inside. Make sure the rod does not go fully through and fall out or the fixing will not lock

At the end of the season nets can be tied into a bundle and placed into a pillow case (not to damage washing machine) and washed at 40°C with normal washing powder. The ground frame can be washed with hot soapy water. Any scuff marks on posts can be rubbed off with a light abrasive scouring pad.

 
WARNING: Check the position of any underground services before using the ground anchors and pegs. We take no responsibility for any damage or injury caused in this manner.

NEVER use the goals without the ground anchor system. In severe weather or windy conditions it is advisable to take your goal down as damage is not covered by the guarantee in such circumstances. If you find the nets are worn along the floor it may be rodents, by spreading pepper along the base frame rodents will be deterred.

It is advisable in any contact sport to take out the relevant insurance's to cover against injury both from taking part, equipment and other unforeseeable circumstances.

Crossbars will not be replaced within the guarantee period if broken by swinging or climbing or any other misuse.

DO NOT try to glue any damaged fixings. Plastic materials in this product vary and this may cause the plastic to break. Always replace any damaged components.

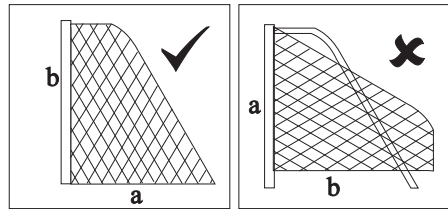


SQUARE MESH Net is cut to shape. Simply throw over the frame and fit each end onto top stanchion by securing on each corner of crossbar.

NOTE: If your net does not fit the first time, you may be fitting it to the goal frame upside down i.e. that is to say the net from the crossbar to the floor (a) is longer than the length of the net to the bottom of the upright.(b)

We advise adult supervision during assembly and use. Observe and follow warning labels attached to goal. Do not use any components, nets or parts if they are damaged or broken. Spare parts and replacement nets are readily available. If others are to install your goal you should show them how to erect and dismantle the goal and hand them a copy of the fitting instruction. If you lose your instructions copies can be attained from our company website. To avoid damage when dismantling the goal follow these guidelines: it is advisable in extreme windy conditions to dismantle the goal and store away. Do not drop any heavy objects on ends of tubes. When dismantling the goal ensure that all fittings are packed away and that none are left on the playing surface. Warning goals must never be left up or used unless they are properly fitted with ground anchors with net attached and securely pegged down.


Hard surfaces: to prevent damage to goal or its components, loosen soil with a steel pole and moisten with some water before inserting the ground anchors. Do not use the goal in sub zero temperatures. warning labels should be replaced when worn and we recommend replacing them every two years -spare labels available. damaged components requested under guarantee must be returned for inspection. Failure to follow the warnings, fitting instructions contained in this document, may invalidate your guarantee. The company, its agents and representatives do not accept any product liability if used outside the EU. Use of the product in other countries outside the EU including the USA is not covered and appropriate insurance should be taken out by the user to cover for any eventuality. We reserve the rights to amend the specifications of our soccer products in the interest of continued development. Your product therefore may differ slightly to those illustrated. Not suitable for children under 36 months until assembled due to small parts.

 NOTE : All plastic extrusions vary and therefore some tubes may be looser or tighter to connector fittings. If you want to increase the diameter of the fitting just wrap masking tape around the part that fits into the tube, twist as you insert the fitting and it will grab to the tube tight ...you can make tighter fits by adding more tape.

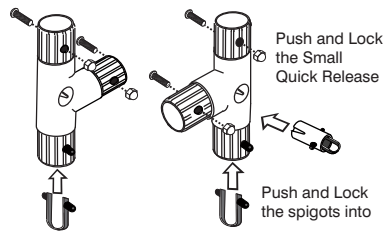


Push and Lock the Small Quick Release

 Push and Lock the spigots into

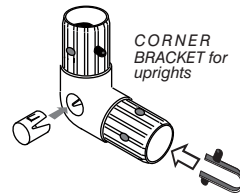

CORNER BRACKET for uprights

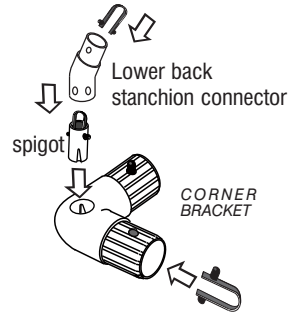 


Lower back stanchion connector


CORNER BRACKET

NET TIES

 
Ensure the teeth of the Net tie are facing you (see step 1). Loop the Net Tie around the Net Cord and slide the end into the horizontal slot and pull tight onto Net Cord (see step 1-2).

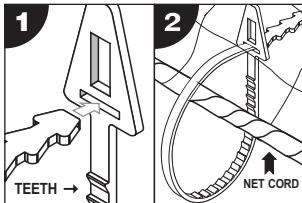

 The vertical slot of the Net Tie is used to secure the net to the post. Loop the Net Tie around the post and insert through vertical slot and twist to lock. (steps 3 - 5).

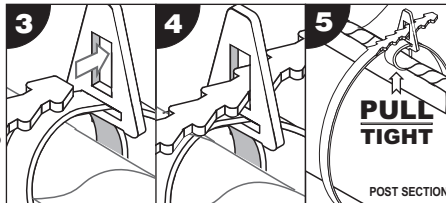

 Any excess Net Tie can looped back into the vertical slot. This will also secure the net tie in a fixed position (steps 6 - 8). If Net Ties are to be removed after use then do not loop back into vertical slot.

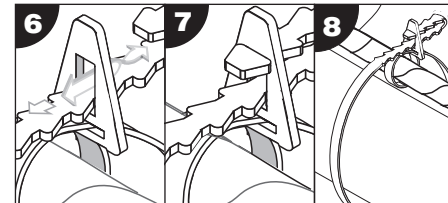

Guarantee HOW TO REGISTER

To register for your guarantee please visit our web page www.itsagoal.net and scroll to the bottom of the page and click on the link 'Guarantee' and follow the instructions. Thank you.