

札

Κ


Α

D

Е

В

M

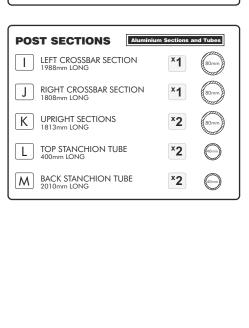



Visit our YouTube site for assembly videos : www.youtube.com/user/Footballgoalposts

Goalpost spare parts and replacement nets are available at - www.itsagoal.co.uk



TEL: 0114 242 4244

В


M

C

Κ

Α

VISIT THE WEB SITE WWW.ITSAGOAL.NET TO REGISTER UK
GOALPOST WARRANTY. WORLDWIDE © COPYRIGHT 2016 ITSA GOAL
POSTS LTD, ALL RIGHTS RESERVED A REGISTERED DESIGN. WE
RESERVE THE RIGHTS TO AMEND THE SPECIFICATIONS OF OUR
SOCCER PRODUCTS IN THE INTEREST OF CONTINUED
DEVELOPMENT. YOUR PRODUCT THEREFORE MAY DIFFER SLIGHTLY

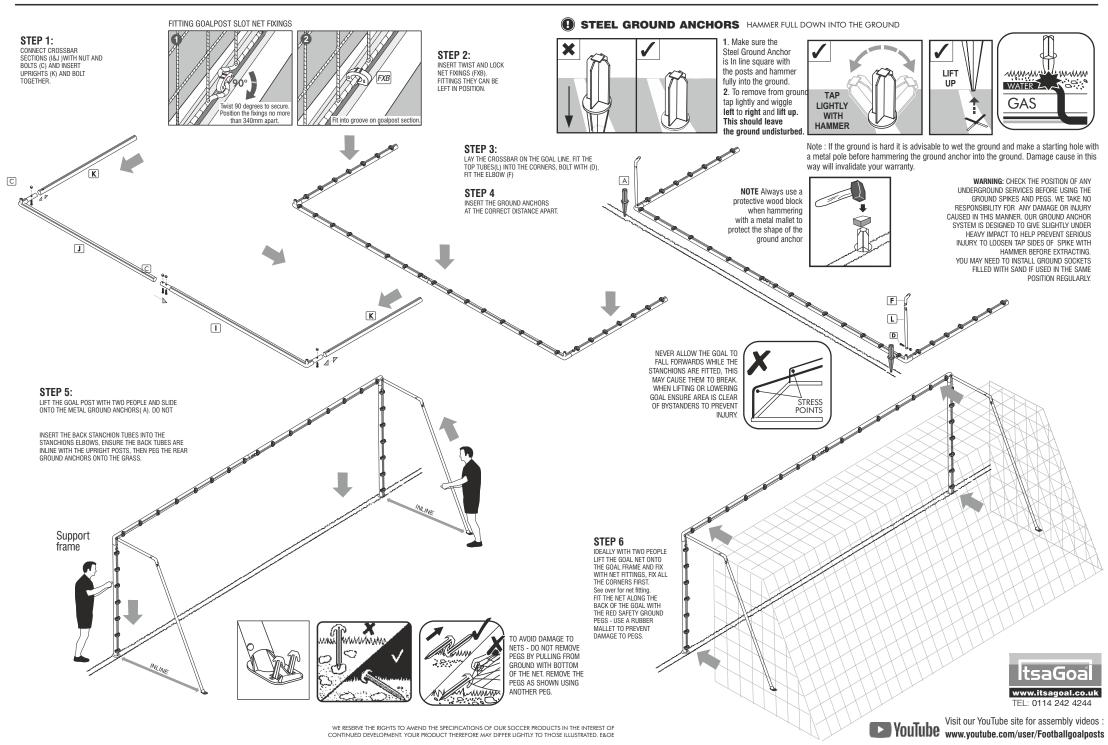


STEP BY STEP NET FITTING

STEP 1

Open net and check the lengths of a and b correspond with the diagram below.

 
NOTE: If your net does not fit the first time. you may be fitting it to the goal frame upside down i.e. that is to say the net from the crossbar to the floor (a) is longer than the length of the net to the bottom of the upright.(b)






STEP 2 With the net the correct way round

lift the net onto the goalpost frame. This is easier with

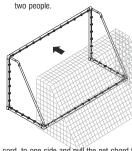

Attach the corners first, where the shown. Then attach the net to the post using the net fixings

STEP 3

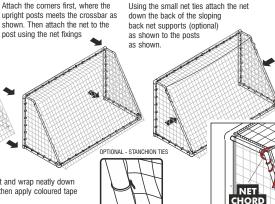

STEP 4

STEP 5


To help define the roof of the net Tie the cord to one side and pull the net chord tight and wrap neatly down and around the stanchion section. If you are regularly attaching or detaching the net then apply coloured tape to the roof corners of net to help identify the roof area.

Goalpost Slot Net Fixing

A net fixing that works on most aluminum goalposts that have a slot on the rear of the posts. This net fixing can be left in place in the slot on the goal extrusion or can be twisted out and left attached in position on the net.

To attached the net turn the net fixing upside down and lay it into the slot with the opening facing up. Do this with goal post extrusion laid on the ground. The two lugs on the top of the fixing will hold the fixing clip firmly in the goalpost slot upside down to enable the net to be pushed through the opening on the back of the fixing.

This is a unique design feature that makes it easier to insert the net inside the fixing compared to other similar types of net fittings. Much easier to fit than other similar net fixings.

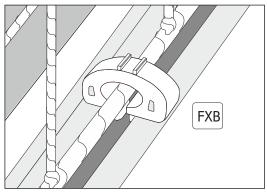

ANCHORING YOUR GOAL WARNING: Check the position of any underground services before using the ground anchors and pegs. We take no responsibility for any damage or injury caused in this manner. HARD SURFACES: to prevent damage to goal or it's components, loosen soil with a steel pole and moisten with some water before inserting the ground anchors. Do not use the goal in sub zero temperatures. ANCHORING YOUR GOAL ON GRASS - POSITION YOUR GOAL ON A LEVEL PLAYING SURFACE, LARGER PEGS CAN BE PURCHASED FOR USE ON SOFT GROUND OR SAND.

CARE & MAINTENANCE WE ADVISE ADULT SUPERVISION DURING ASSEMBLY

OBSERVE AND FOLLOW WARNING LABELS ATTACHED TO GOAL. DO NOT USE GOALS WITH ANY DAMAGED OR MISSING COMPONENTS, SPARE PARTS AND REPLACEMENT NETS ARE READILY AVAILABLE TELEPHONE OUR GOAL-LINE 0114 2424244 DAMAGED COMPONENTS REQUESTED UNDER GUARANTEE MUST BE RETURNED FOR INSPECTION. FAILURE TO FOLLOW THE WARNINGS. FITTING INSTRUCTIONS CONTAINED IN THIS DOCUMENT, MAY INVALIDATE YOUR GUARANTEE. NOTE: WHEN USING A BAG PLEASE PACK THE GOAL SECTIONS CAREFULLY INTO THE BAG. THE COMPONENTS ARE DESIGNED TO FIT INTO THE BAG EFFICIENTLY AND THEREFORE. DO NOT UNDER ANY CIRCUMSTANCE THROW THE COMPONENTS INTO THE BAG AND THEN FORCE THE ZIP TO CLOSE AS THIS WILL BREAK THE ZIP FASTENER. BAG MAINTENANCE - SPONGE BAG DOWN WITH HOT SOAPY WATER. ZIP WILL RUN EASIER IF YOU RUB BOTH SIDES OF THE ZIP TRACK WITH CANDLE WAX GROUND ANCHORS - NOTE: ALWAYS ENSURE ALIGNMENT OF GROUND SPIKES IS CORRECT TO ALLOW UPRIGHTS TO EASILY SLIDE OVER TOP OF SPIKE. DO NOT USE FRONT GROUND SPIKES IF THEY BECOME MISSHAPEN OR DAMAGED AS THIS COULD CAUSE DAMAGE TO THE BASE OF UPRIGHT.

CLEANING

AT THE END OF THE SEASON NETS CAN BE TIED INTO A BUNDLE PUT INTO AN OLD PILLOW CASE, AND TIE SHUT (NOT TO DAMAGE WASHING MACHINE) AND WASHED IN A COOL WASH WITH NORMAL WASHING POWDER. THE GOAL FRAME CAN BE WASHED WITH HOT SOAPY WATER. ANY SCUFF MARKS CAN BE RUBBED OFF WITH A LIGHT ABRASIVE SCOURING PAD.

 
WARNING

THE GOAL IS DESIGNED FOR ASSOCIATION FOOTBALL (SOCCER) ONLY AND NO OTHER PURPOSE. CHECK ALL FITTINGS ARE FULLY SECURED BEFORE USE AND CHECKED PERIODICALLY. ENSURE THAT THE UPRIGHTS AND BACK STANCHIONS ARE STRAIGHT AND PROPERLY ALIGNED BEFORE FITTING THE NET.WHEN LIFTING OR LOWERING GOAL ENSURE AREA IS CLEAR OF BYSTANDERS TO PREVENT INJURY. IT IS ADVISABLE IN EXTREME WINDY CONDITIONS TO DISMANTLE THE GOAL AND STORE AWAY. WHEN DISMANTLING THE GOAL ENSURE THAT ALL FITTINGS ARE PACKED AWAY AND THAT NOTHING IS LEFT ON THE PLAYING SURFACE. DO NOT USE DAMAGED NETS. NEVER USE GOALS WITHOUT SECURING BOLTS. GOALS MUST NEVER BE LEFT UP OR USED UNLESS THEY ARE PROPERLY FITTED WITH GROUND SPIKES AND ANCHORS WITH NET ATTACHED AND SECURELY PEGGED DOWN. DO NOT AT ANY TIME USE YOUR GOAL WITHOUT GROUND ANCHORS. DO NOT CLIMB ON THE NET OR GOAL FRAME DO NOT DROP ANY HEAVY OBJECTS ON ENDS OF TUBES. NO LIABILITY IS ACCEPTED WHATSOEVER BY THE COMPANY IT'S EMPLOYEES OR AGENTS FOR DAMAGED LOSS OR INJURY CAUSED BY NEGLIGENCE OR MISUSE. IT IS ADVISABLE IN ANY CONTACT SPORT TO TAKE OUT THE RELEVANT INSURANCE'S TO COVER AGAINST INJURY BOTH FROM TAKING PART. EQUIPMENT AND OTHER UNFORESEEABLE CIRCUMSTANCES. STORAGE - A HANDY GOAL CARRY BAG TO TRANSPORT AND STORE YOUR PORTABLE GOAL IS AVAILABLE SEPARATELY.



NEVER STRIKE THE POSTS WITH A HAMMER OR SOLID OBJECT.

ALWAYS PRISE APART OR LIGHTLY TAP THE CORNER SECTIONS WITH A RUBBER MALLET. MAKE SURE POSTS AND CORNERS ARE IN LINE DURING ASSEMBLE AND DISASSEMBLY



WARNING: WE RECOMMEND A RISK ASSESSMENT OF SOIL CONDITIONS, EG. FOR SOFT, VERY WET OR SANDY GROUND WE STRONGLY RECOMMEND OUR LONGER 300MM NET PEG IS USED (AVAILABLE SEPARATELY). FREESTANDING GOALS WITH COUNTER BALANCE WEIGHTS MAY BE MORE SUITABLE FOR EXTREME GROUND CONDITIONS.


DO NOT at anytime misuse or throw the metal spikes. If the metal spikes become worn or misshapen then they should be replaced as they can damage the upright sections. NEVER use the goals without the ground anchor system. In severe weather conditions it is advisable to take your goal down as Damage is not covered by the quarantee in such circumstances




DO NOT SWING ON CROSSBARS CROSSBARS WILL NOT BE REPLACED WITHIN THE GUARANTEE PERIOD IF BROKEN BY SWINGING OR CLIMBING OR ANY OTHER MISHSE





WARNING: DO NOT TOUCH OVERHEAD SERVICES WITH GOALPOST SECTIONS. CHECK THE POSITION OF ANY OVERHEAD SERVICES WHEN SETTING UP OR DISMANTLING THE GOALS. EG. POWER LINES. TELEPHONE CABELS ETC.

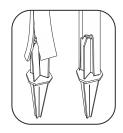


Fitting Instructions

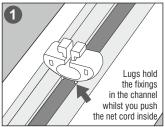


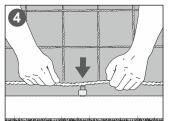


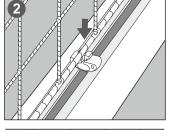



5

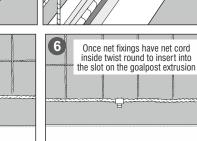

 

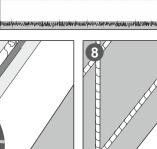

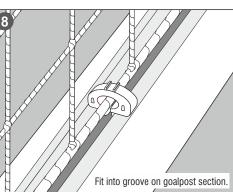

 

SPARE PARTS TEL: 0114 24 24 244

WORLDWIDE © COPYRIGHT 2016 ITSA GOAL POSTS LTD. ALL RIGHTS RESERVED A REGISTERED DESIGN

MADE IN ENGLAND www.itsagoal.co.uk